

# HOW TO INSTALL YOUR GLASS SPLASHBACK

## BEFORE STARTING

- Check that your glass splashback fits
- Ensure your worktop is fitted securely
- Check your worktop is level
- Clear all the dust and grease from the worktop
- If you have bought more than 1 item, please ensure they are the same colour and match. (In the unlikely event they don't match, please contact us before fitting.)
- Your glass splashback can only be fitted to the wall one way. You will be sticking the painted side to the wall, and the side with no paint on (polished side) is outward facing.
- Note: Splashbacks are designed to be stuck to a wall, with no light behind. Because of this, minor imperfections or slightly uneven surface on the reverse is acceptable. Your splashback will be considered perfect if any imperfections are not noticeable from the front when placed onto the wall.

## HANDLING GLASS

Handle glass with care and wear eye protection and suitable gloves.

**Special Care** should be taken with corners of the splashback, as impact will cause the product to crack or shatter.

**REMEMBER** - Unfitted glass is fragile

**DO NOT** place on hard surfaces prior to fitting

**DO NOT** fit the splashback directly on to a hob or work surface. Use Spacers

**DO NOT** place the splashback on its edge or any hard surface during fitting.

**DO NOT** use adhesive that is not supplied by us. This will void your warranty and may damage your splashback.

**DO NOT** clean your splashback until the adhesive has set. Make sure you follow the manufacturer's instructions.

**To prevent product failures, ensure that:**

All fitting steps are completed

A space of 2mm is left between the product and all surfaces

The surface where the splashback is applied is flat, dust, grease and sharp object free.

## Tools needed to fit your splashback



Silicone Gun



Splashbacks Direct Adhesive


## STEP 1

Check your splashback is the correct size & colour and there is no damage. Ensure the wall being fixed to is dry, dust, grease and sharp object free.



## STEP 2

Cut the silicone nozzle the width of your index finger. Apply the silicone directly to the wall in straight lines, leave at least a 50mm gap from each edge.

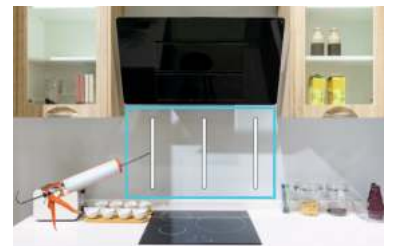

## STEP 3

Place the bottom edge of the splashback on the spacers, then push the glass to the wall. Apply a firm even pressure over the whole surface.



## STEP 4

Seal the edges with a bead of the adhesive.

**DO NOT CLEAN YOUR SPLASHBACK UNTIL THE ADHESIVE SETS (usually 3 days)**



## CLEANING

**DO NOT USE ABRASIVE CLEANERS.**

To clean use a professional glass cleaner

**For best results use U.V TEK Glass Cleaner**

**Only Splashbacks Direct's adhesive gives you a 10 Year Guarantee**

**USING OTHER ADHESIVES WILL VOID YOUR WARRANTY**